

StencilMark

SETTING UP PRINTER DRIVER TO DEFAULT STENCILMARK™ SETTINGS

START HERE:

Review the instructions printed on the software before beginning.

1. Insert disc and follow the installation instructions. Once the installation is complete and you've restarted your computer continue to the next step.
2. Open "Printers and Faxes" by clicking on the start button and selecting the Control Panel.
3. Single click on the Epson LQ-1 170 ESC/P2 printer driver.
4. Select File> Server Properties> "Forms" tab
5. Check "Create new form."
6. Give your form a name, ex.: StencilMark 3x2
7. Paper Size: Set width to stencil width inside glue lines. Width – 5 in., Height (Length) - 2.00 in., Left: 1.50 in. (only SM3000 imprinter), then click "Save Form". (Note: You need to add 2 inches to the width in order to have the stencil line up properly. So if your width is 3 inches you should enter 5 inches in the width box.)
8. Repeat steps until you have entered all the desired forms you need. Additional forms can be entered at any time.
9. Click "Ports" tab and select the port your printer is connected to. It will usually be LPT1 or USB001. (Note: Not all USB ports are activated when you start your computer. Run a "Test Print" from your print driver properties before calling for tech support.)
10. If your imprinter does not respond you have a system problem unrelated to StencilMark™. Consult your PC or Windows manual or contact your IT personnel.
11. If you have a disabled port consult your PC or Windows manual or contact your IT personnel.
12. Click "Drivers" tab. You should see a driver called Epson LQ-1170 ESC/P2. Click on this so it is highlighted.
13. Exit "Printers and Faxes".

The Printer Driver set-up is now complete.